



Service  
Service  
**Service**



VCM7177/00T  
TC71375T  
TC71775T  
VC71375T  
VC71775T

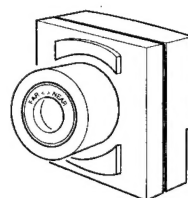

CL 66610005\_301A AI

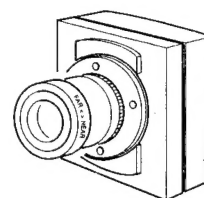

CL 66610005\_301B AI

NORTH-AMERICAN MODELS:  
Service Manual: 8098

# Service Manual

## Contents

## Page

1	Introduction	2
2	Technical Data	2
3	Control Functions	3
4.	Connections	3
5.	Warnings and notes	3
6.	Block Diagram	4
7.	Service policy	5
8.	Service board	5
9.	Power panel <i>diagram/PWB</i>	7/6
10.	Alignment Instructions	8
11.	Fault Diagnosis on board level	
12.	Exploded view & Spare parts list	12
	Complaint description form(s)	

©Copyright 1996 Philips Consumer Electronics B.V. Eindhoven,  
The Netherlands All rights reserved. No part of this publication  
may be reproduced, stored in a retrieval system or transmitted,  
in any form or by any means, electronic, mechanical,  
photocopying, or otherwise without the prior permission of Philips.



**PHILIPS**

## 1. Introduction

These VM7-Cam is a family of CCD Colour Observation Cameras which is derived from the X1-C family. This VM7-Cam family covers following type of cameras:

VCM7137/00T	fixed lens 4 mm F1.2
VCM7177/00T	CS lens 4 mm F1.2
TC71375T	fixed lens 4 mm F1.2
TC71775T	CS lens 4 mm F1.2
VC71375T	fixed lens 4 mm F1.2
VC71775T	CS lens 4 mm F1.2


All the cameras can be used in combination with a protecting cover (VCM1152).

## 2. Technical Data

Power supply voltage	24 V DC , as supplied by the observation system monitor, connected with max. 200 m / 600 ft or 300 m / 900 ft (via external power).	
Power consumption	≤ 3 W	
Ext. Power source	Any approved DC voltage generator of 24 V DC, 500 mA in case that the cable length exceeds 200 m / 600 ft.	
System cable	4-wire twisted pair of telephone cable (16 Ω/0100 m) (25 m included in the carton).	
Video output	2-wire interface via system cable. diferential mode 175 mVpp.	
Sound output	2-wire interface via system cable. common mode 500 mVpp.	
Microphone	Built in, electret (can be switched off at the camera).	
Synchronization	Automatically to the monitor	
Pick up element	1/3" Solid state CCD	
	NTSC	: LZ23132
	PAL	: LZ23232
Picture elements	512(H) x 492(V) for NTSC 512(H) x 582(V) for PAL	
Resolution	330 TVL	
Iris	Electronic and DC controlled auto Iris lens.	
Gain control	Automatic 20 dB.	
Light sensitivity		
• for fixed lens:	8.3 lux, 50 IRE (-6dB) at F2.0, 3200K (lens transmission 86%, scene reflection 100%)	
• for CS mount lens:	3.0 lux, 50 IRE (-6dB) at F1.2, 3200K (lens transmission 86%, scene reflection 100%)	


Lens	Fixed lens	CS-mount
Mounting	—	CS standard
Image format	1/3"	1/3"
Focal length	3.8 mm	4 mm
Angles of view	73 deg. 54.8 deg	61 deg. horizontal 48 deg. horizontal
Relative aperture	F2.0	F1.2
Focus	1m-infinity	adjustable
Dimensions (HxWxD)	72 x 70.5 x 69.5	72.5 x 70 x 60
Weight	183.5 gr.	190 gr.
Ambient temperature		
Operating	-10° to +50° Centigrade.	
Storage	-25° to +70° Centigrade.	
Ambient humidity		
Operating	20 to 90 % RH	
Storage	up to 99 % RH	
Service policy	First line service: Board swapping using simple diagnoses, see chapter 11 for the details. Second line service: Central repair at factory, see chapter 7 for the details.	

### 3. Control Functions

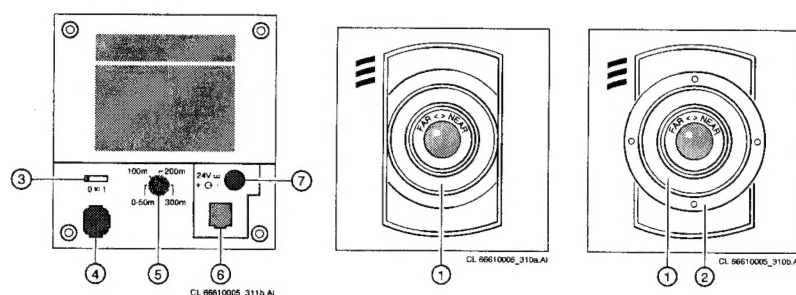

1. Focus ring
2. Back focus ring
3. Sound on/off switch
5. cable length selector

### 4. Connections

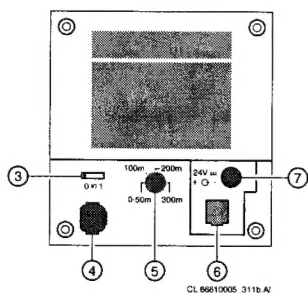

4. Auto iris socket
6. System cable socket
7. External power socket

## 5. Warnings and notes

### WARNINGS

1. **NEVER measure directly at the output of the CCD image sensor.**  
**It will destroy the sensor immediately.**
2. Safety regulations require that the unit should be returned in its original conditions and that components identical to the original components are used. The safety components are indicated by the symbol ▲
3. All ICs and many other semi-conductors are sensitive to electrostatic discharges (ESD). ▲ Careless handling during repair can drastically shorten the life. Make sure that during repair you are connected by a pulse band with resistance to the same potential as the earth of the unit.  
Keep components and tools also at this same potential.
4. When making settings, use plastic rather than metal tools. This will prevent any short-circuit and the danger of a circuit becomes unstable.
5. Always switch off the set before replacing any of the components or separating the PW boards.
6. Never aim the camera at the sun or other extremely bright light sources.


### NOTES:

1. This manual is prepared for all types of cameras (known at this moment) within this VM7-Cam (derived from the X1- C family range.  
The types are mentioned in the Introduction chapter.  
This manual support the board swapping repairs.
2. For alignments please order and refer "**Alignment Software Guide**" for X1-Colour camera, service code is 4822 727 20001. This guide also includes the software on 3.5" floppy.  
A brief description is also presented in this manual.
3. Be attentive at the cable (item 53) connecting connectors P3 on processor board and S3 on power board.  
The cable can be connected in both directions.  
The correct way to connect the cable is that the blue indication of cable should be visible from top while inserting it in connector P3 on processor board. Then the cable should be connected to S3 on power board without any bend. The blue indication of cable on power board side will be at bottom side.  
If the cable is wrongly connected the camera will not function but there will be no damage.
4. In order to remove the power board, desolder the external power socket S2, because it is screwed into the backcover (inside).  
The Power Board can be now taken out.  
Before start repairing connect short circuit pin 2 and 3 of plug S2 on the power board !!

## 6. Block diagram

VCM 7137/00T

4

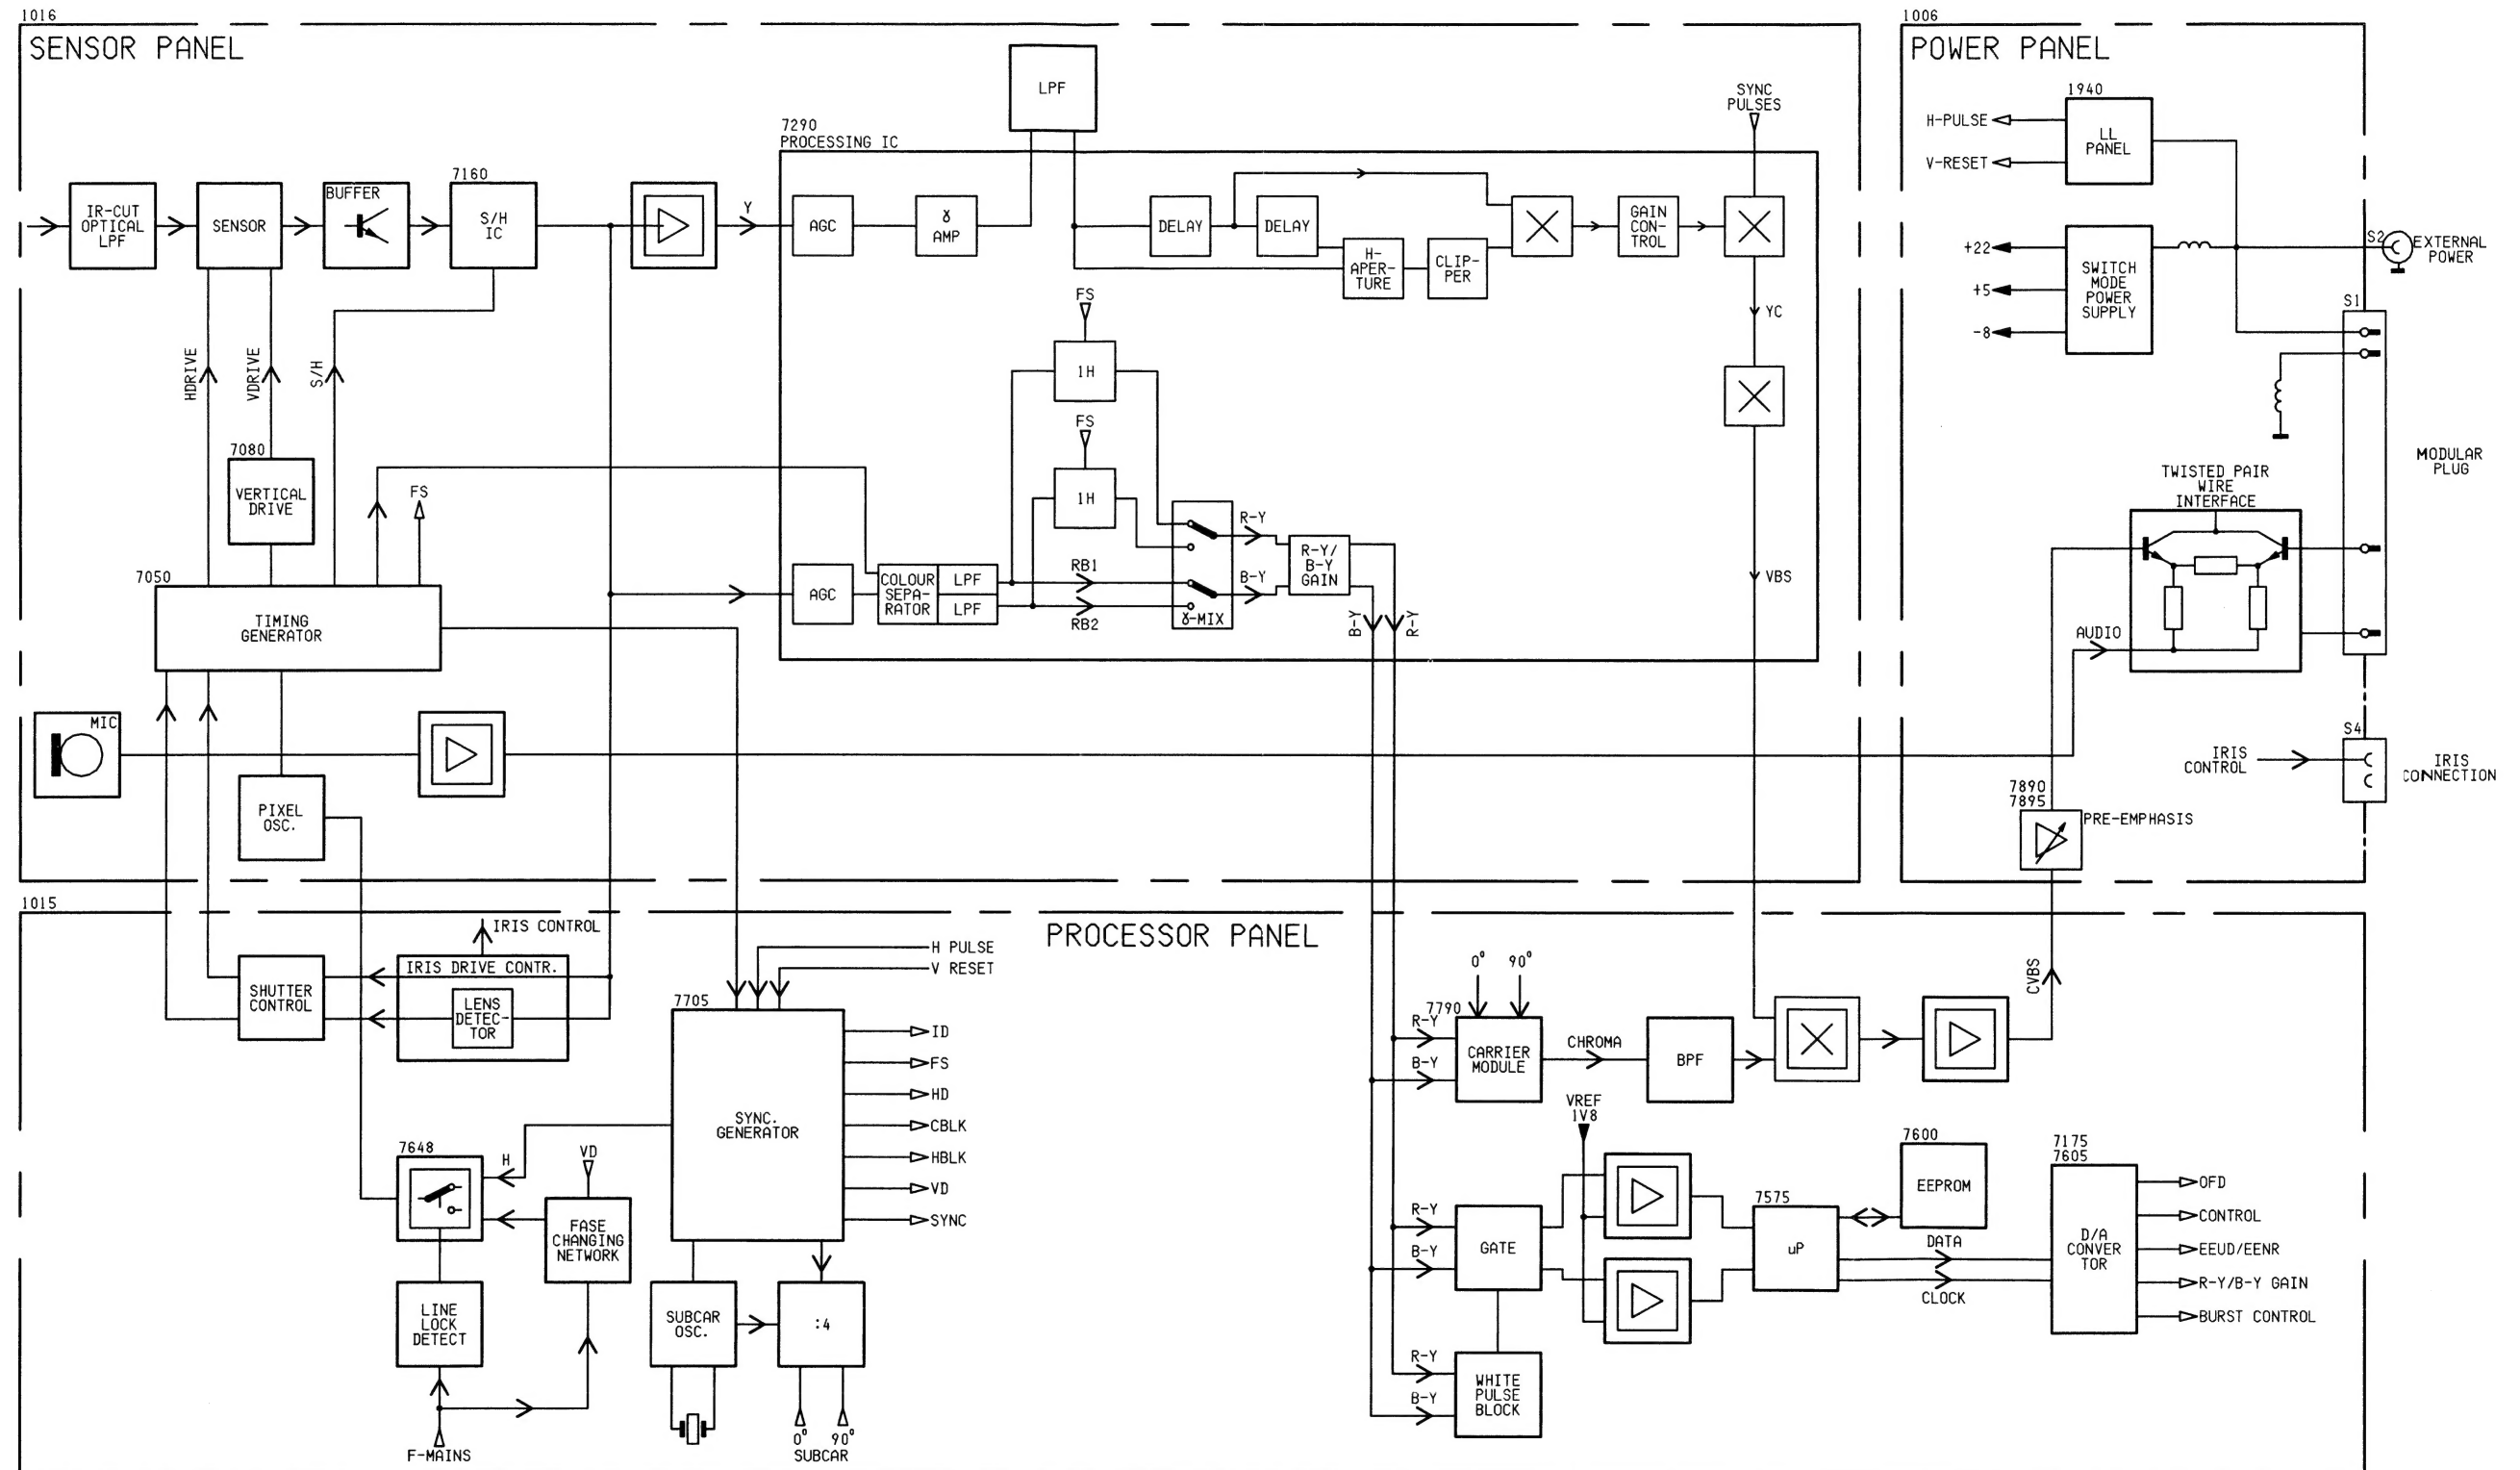

66630014/02, X001  
19 0996

## 7. Service policy

The Service policy for this product is :  
board swapping (for sensor & processing panels) as  
first line service. It means only replacement of the  
defective board. In case of necessary repairs, the  
defective "repairable" boards must be returned to  
Philips Consumer Service according the central repair  
procedure.

This camera type contains one assembly, which can be  
repaired centrally via the so called "central repair  
procedure".

The relevant panels are mentioned under the  
heading "Repairables" in chapter 12 (spare parts list).  
The central repair procedure has been introduced to  
guarantee a fast, efficient and correct repair of panels  
or assemblies with complex circuitries or new  
technologies.

## 8. Service board

The service board 4822 212 30881 serves two  
functions:

1. An interface board between the computer and  
camera panels for electrical adjustments.
2. The extension board to do various measurements  
and repair on different panels.

The processor panel is to be connected to 22 pins male  
connectors on the service board and Sensor assembly  
to 22 pins female connectors. These panels can be  
tightened by means of screws and nuts provided along  
with the service board.

The Power board being connected to the processor  
panel should be also tightened by means of screws for  
mechanical stability. The service board can be  
connected to computer via RS232 9-PIN D- Shell  
connector S8.

The LED on the service board indicates the right  
connection and supply. If it does not glow, check the  
connections and supply.

### Signal descriptions:

HBLK	Horizontal blanking pulse
VD	Vertical drive Pulse
HD	Horizontal drive pulse
WBLK	Wide blanking pulse
PBLK	Pre-blanking pulse
	CBLK
	Composite blanking pulse

### Central Repair Procedure:


Contact your local service organisation to obtain a  
repairable board. After confirmation a replacement  
panel or assembly will be sent to you. Send the  
defective panel or assembly inclusive a "(standard)  
repair form" to your local service organisation.  
The defective panel should be correctly packed  
inclusive ESD protecting material. The original packing  
of the returned/replacement panel can be used for this  
purpose.

The accompanying "repair form" should contain all  
basic information such as:

- full model number of the set
- date of failure
- reporting country
- serial number/production code of the set
- description of the failure including timing indication  
(immediate, after ... minutes warming up, sometimes)


ENCP	Encoder DC clamp pulse
WBR	White Balance Red
WBB	White Balance black
VREF	Reference voltage (1V8)
VBS	Video Blanking Sync. signal
HAPC	Horizontal Apperture Control
EEUD	A control pin for shutter speed
EENR	A control pin for shutter speed
OFD	Overflow drain voltage signal
TXD	Data transmission acknowledgment
RXD	Data receipt acknowledgement
YH	Luminance (high frequency)
IRIS	IRIS control signal
CLK	Clock pulse for D/A converter
ENAB	DAC Enable
CONTR	Control voltage for IRIS-drive
DRIVE	Voltage for IRIS
LLOUT	Line lock output signal (Main ac-frequency)
LLIN	Line lock input signal (Main ac-frequency)
MODON	Signal to on/off modulator
AD0..AD3	Address bits to select the camera
HEXT	External line frequent signal for H-synchronisation
VEXT	External frame frequent signal for V-synchronisation
CVBS	Chroma (composite) Video Blanking signal
D02	9.5 MHz clock
VOC	Control voltage for pixel oscillator

## Service board

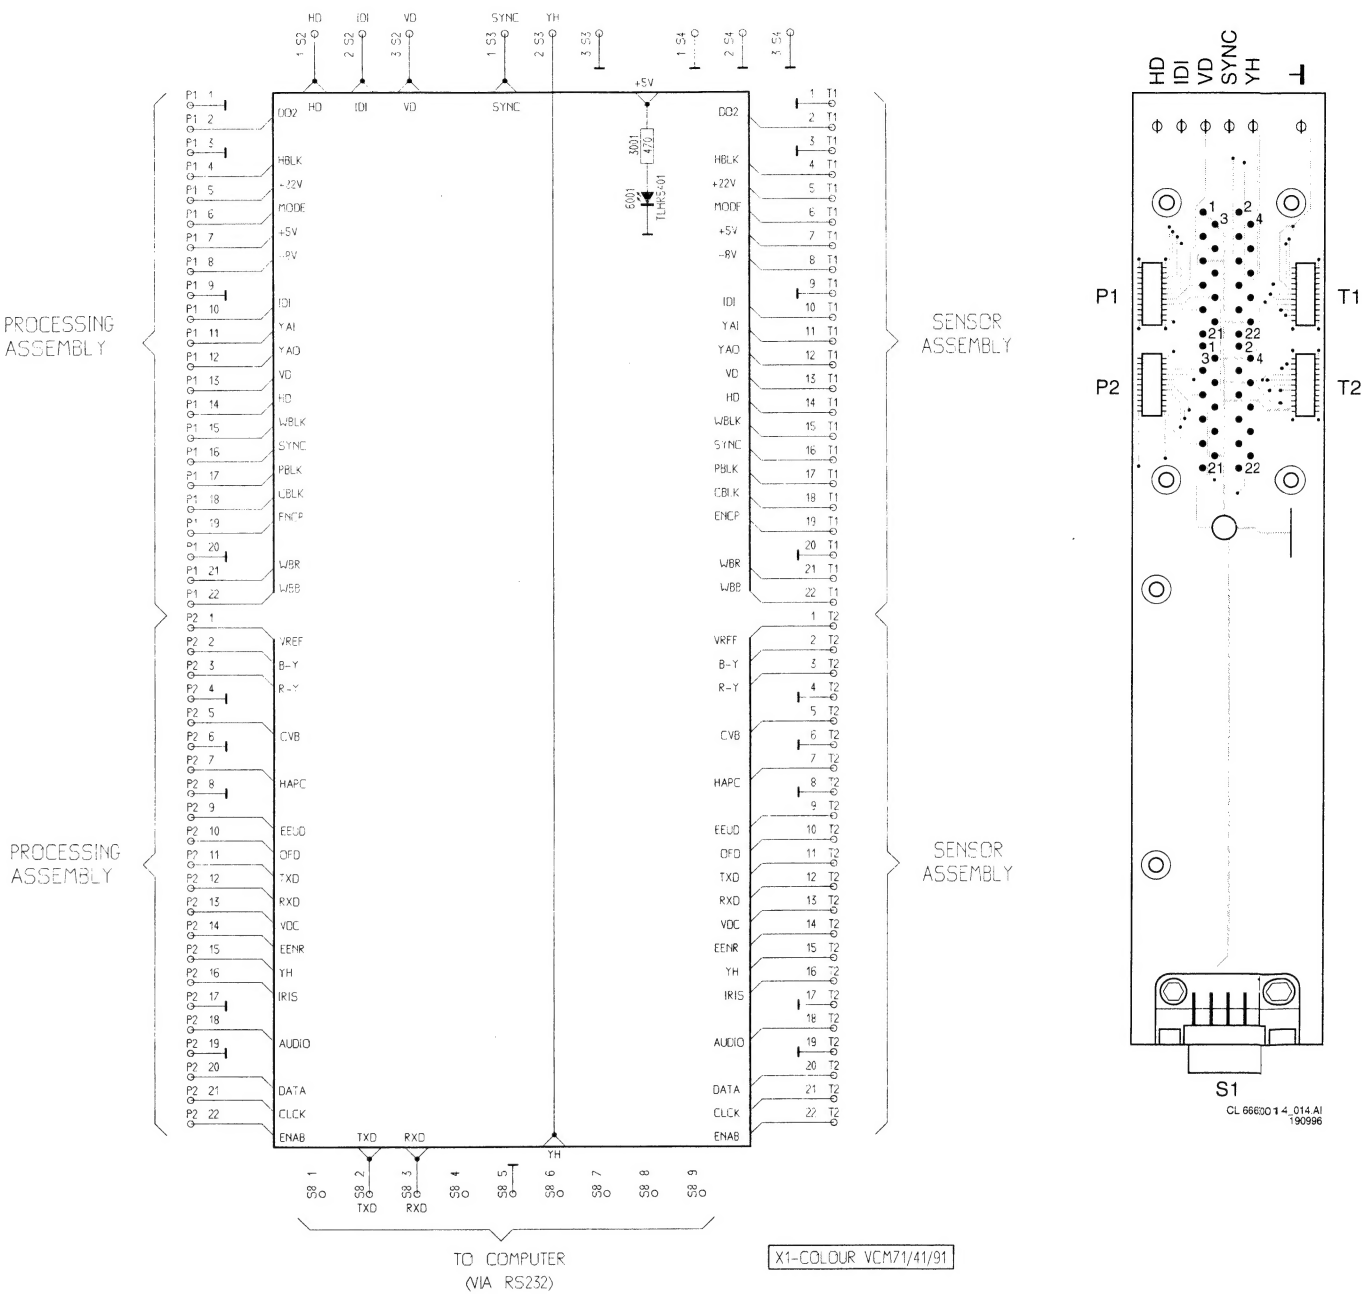


9. Power panel board

Component side

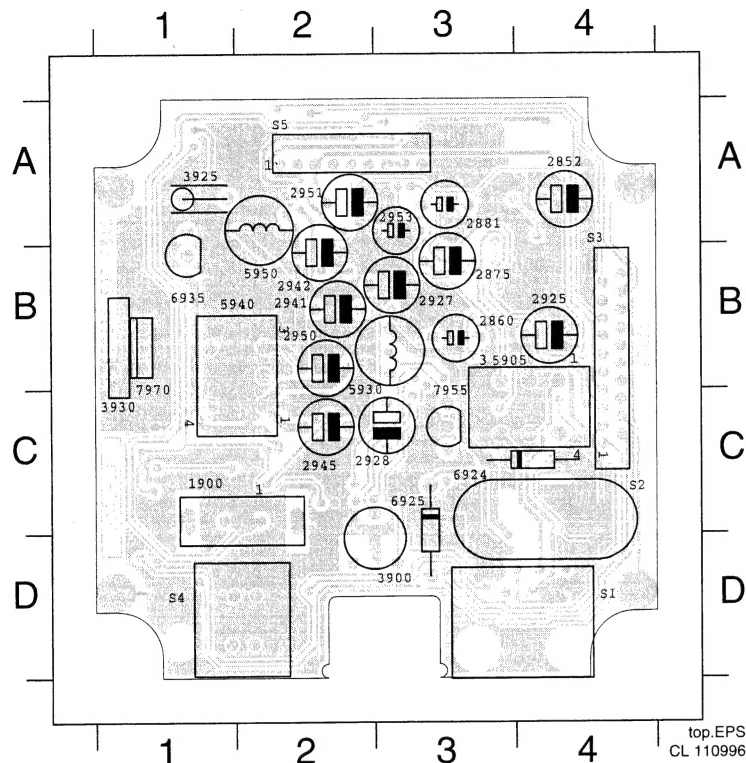

PCS 82 040 GB

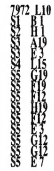

## 10. Electrical Adjustments

The alignments are done by means of software which can be used on any AT, XT or notebook computer. For detailed description of alignments please refer "Alignment Software Guide" for X1-Colour camera, service code is 4822 727 20001. This guide also includes the software on 3.5" floppy. However, a simple method has been worked out to use the factory aligned panels with very little work. This will save tremendous time. The method is described here as follows:

- The factory will provide the aligned sensor assembly (with opto-block) and processing panel. The aligned panels have different D/A converters (DACs) filled with certain decimal values. The sensor assembly will be provided along with hard copy of all the DACs values. The DACs associated with Sensor assembly's alignment are marked with \*.
- The processor assembly will be also aligned but no hard copy of values will be provided. All the DACs values are stored in EEPROM, item no. 7800 on processor panel.

Case 1: Sensor assembly is defected, but processor assembly is o.k.

- Replace the defected sensor assembly by repaired one.
- Load the alignment software. Refer the alignment software guide instructions.
- Then enter the values of DACs bits 03, 12, 13, 15, 16, 17, 19, 20, 21, 22 & 23 (marked with \*) as mentioned on the paper provided along with the assembly. These DACs bits are associated with Sensor assembly alignment.

Case 2: Processor panel is defected but the EEPROM 7800 is o.k.

- Load the alignment software program and read the DACs bits values as described in the software guide.
- Take the print out of these values.
- Replace the defected processor panel by the repaired one.
- Using software enter the old values of DACs marked with \* on your print out i.e. of DACs bits 03, 12, 13, 15, 16, 17, 19, 20, 21, 22 & 23.

Case 3: If EEPROM 7800 is defected then you can not read the old values of sensor-associated DACs bits. Then you have to do the alignments yourself for these DACs bits. These alignments are described in the "Alignment Software Guide" for X1-Colour camera, service code is 4822 727 20001.

**Note:** The defect in EEPROM can be diagnosed by the alignment software on loading the program while different panels connected via service board.

## 11. Fault Diagnosis

The fault diagnosis is made on board level. Letters V,W,X,Y,Z will be used as reference in the fault finding flow chart. First always check the LED on the service board. If it does not glow check different camera panels' connections on service board, and power supply.

**Note:** Measurements on various connector pins can be also done on the Service Board (4822 212 30881).

### Sensor defect:

**V:** Check the pulses and DC-levels on the pins of the sensor (pins 1-16) item 7025.  
 Pin 1: RS-pulse 9.5 MHz 4-8.5 V,  
 Pin 2: DC 15 V,  
 Pin 3, 14: ground,  
 Pin 4: sensor output (DC=10 V),  
 Pin 5: DC 15 V,  
 Pins 6,7,8,9: HF-PULSE (0-5 V),  
 Pins 10, 12: Line Frequent pulse (0-(-8 V)  
 Pins 11, 13: Line + Frame Frequent pulse (0-(-8 V)-17 V  
 If any signal is missing, the sensor 7025 is defected.

### Sensor board defect:

**W:** If the following timing pulses are present it shows the processor board is ok.

- IDI on connector 10-T1 Line frequency/2 pulse
- PBLK on connector 17-T1 Line frequency pulse
- ENCP on connector 19-T1 Line frequency pulse
- CBLK on connector 18-T1 Line frequency pulse
- SYNC on connector 16-T1 line frequency pulse
- VD on connector 13-T1 field frequent pulse

**X:** and now if the signal on one of the following test points is missing the defect is on the sensor board:  
 - Luminance on connector 15-T2, 5-T2, TP234 929-7290)  
 - Chrominance on connector 3-T2, 2-T2  
 - Iris on connector 16-T2 (video signal of approx. 1Vpp on 1.8 Vdc)  
 - 9.5 MHz clock on connector 2-T1

### Processor board defect:


**Y:** If the signals on following test points are present it shows Sensor Board is ok.

- Luminance on connector 15-P2
- Chrominance on connector 3-P2 and 2-P2
- Iris on connector 16-P2
- 9.5 MHz clock on connector 2-P1


**Z:** and now if no signal is present on one of following test points the processor board is defective.  
 - CVBS on connector 11-P3  
 - Chroma on connector 2-P5  
 - U on connector 1-P5 (only 4170)  
 - V on connector 6-P5 (only 4170)

Further if one of the timing pulses mentioned above is missing also the fault is on the processor board.

## Fault FINDING tree(S) on board level

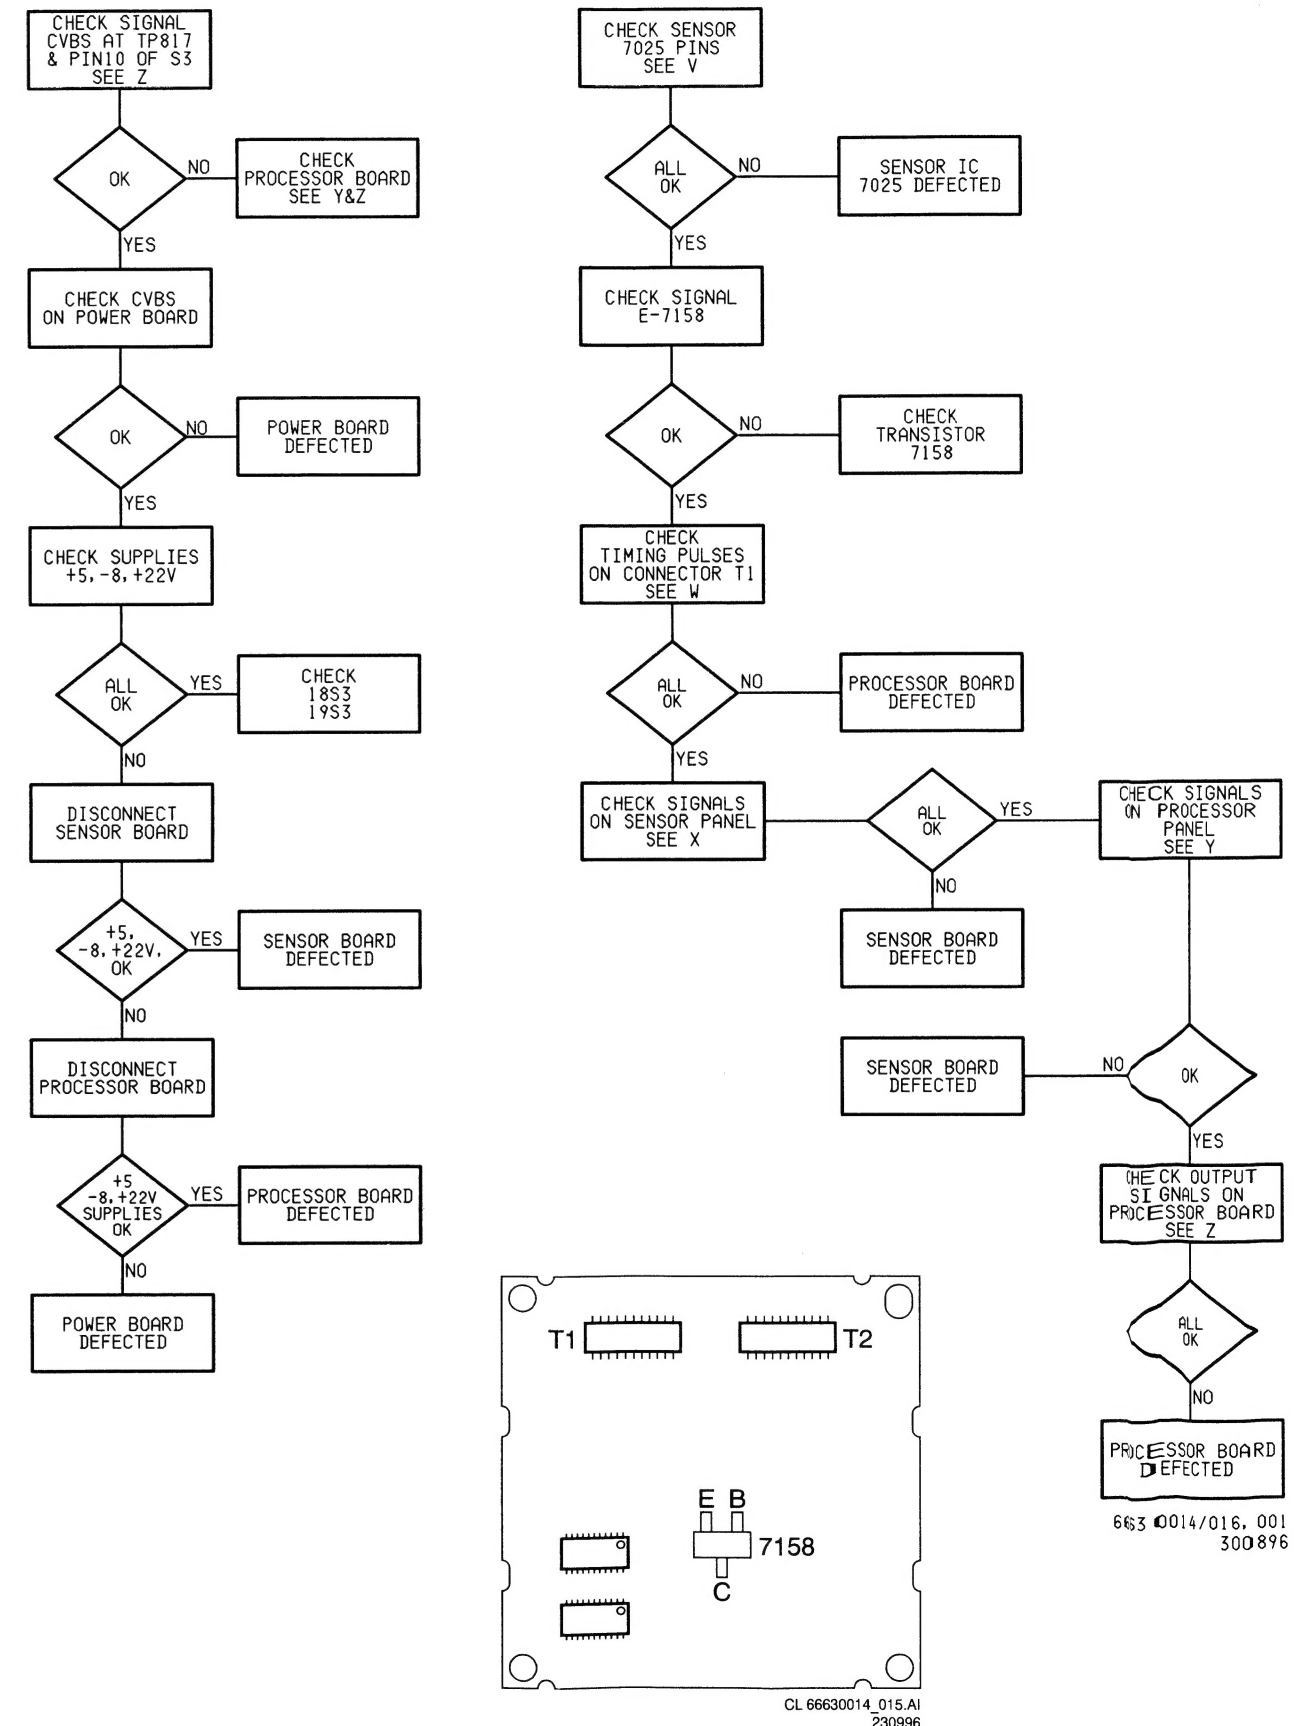



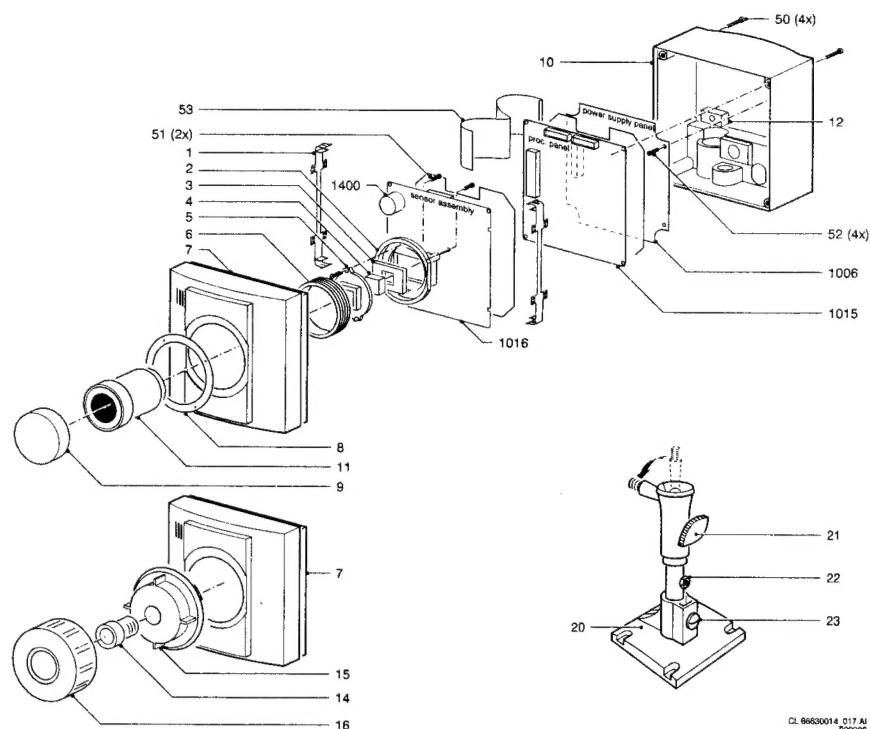

POSITION  
NUMBER

SERVICE  
CODE

DESCRIPTION

1	4822 404 31296	Spacer
2	4822 255 70286	Sensor interface block
3	4822 466 62405	Gasket
4	4822 381 20181	Optical low-pass filter
5	4822 432 60782	Mask
6	4822 532 12249	Adaptor-ring
7	4822 432 60777	Housing front part
8	4822 532 12251	Retaining-ring
9	4822 462 71776	Dust cap
10	4822 441 11811'	Housing back part
11	4822 381 11473	CS lens 4 mm F1.2
12	4822 265 10753	Power jack S2
13	4822 466 11333	Optical block assy (VCM7137/..)
13	4822 466 11334	Optical block assy (VC71375T-TC71375T)
13	4822 218 11521	Optical block assy (VCM7177/..)
13	4822 218 11519	Optical block assy (VC71775T-TC71775T)
14	4822 381 11699	Fixed lens 4 mm
15	4822 466 11335	Lens interface
16	4822 462 10806	Lens cap
20	4822 462 10507	Tripod assy- grey
21	4822 413 41884	Knob for tripod- grey
22	4822 502 21582	Screw M5*8 for tripod
23	4822 505 10665	Lock nut M5 for tripod
50	4822 502 13887	Torx screw 2*20 (4*)
52	4822 502 13886	Screw 2*6 (4*)
53	4822 323 50158	Cable P3-S3

Various:

	4822 321 62696	Camera cable 15 meter
T1	4822 265 51361	22 pins connector
T2	4822 265 51361	22 pins connector
P1	4822 267 60364	22 pins connector
P2	4822 267 60364	22 pins connector
P3	4822 267 60365	20 pins connector
1400	4822 242 30176	Microphone

POSITION  
NUMBER

SERVICE  
CODE

DESCRIPTION

#### REPAIRABLES:

These unit can be returned to PCS for repairing at factory, see chapter 7.

1015	4822 214 11846	Processor panel assy (PAL)
1015	4822 214 11837	Processor panel assy (NTSC)
1016	4822 214 11839	Sensor panel assy (PAL- fixed)
1016	4822 212 31734	Sensor panel assy (PAL- CS)
1016	4822 214 11835	Sensor panel assy (NTSC-fixed)
1016	4822 212 31735	Sensor panel assy (NTSC-CS)

#### AUXILIARY TOOLS

4822 321 21988	RS232 cable 9p male-female 1 meter
4822 321 22822	RS232 cable 9p male-female 3 meter
4822 212 30881	Service board complete
4822 727 20001	Alignment software guide with floppy

## POWER PANEL PARTS

1006 4822 214 11842 POWER PANEL

## Various

S1 4822 267 41183 4 pins connector  
 S3 4822 265 51362 20 pins connector  
 S4 4822 267 41109 4 pins connector  
 S5 4822 265 10754 9 pins connector

1900 4822 277 21765 AUDIO SWITCH  
 1930 4822 117 12567 TRANSISTOR-RE  
 SISTOR ASSY  
 1940 4822 214 11844 LINE LOCK  
 PANEL

## -II-

2852 4822 124 42058 33 $\mu$ F 20% 50V  
 2853 4822 126 12944 47nF 10% 50V  
 2854 4822 124 80653 6.8 $\mu$ F 20% 6.3V  
 2858 4822 122 33788 82pF 5% 50V  
 2859 4822 126 12944 47nF 10% 50V  
 2860 4822 124 41579 10 $\mu$ F 20% 50V  
 2866 4822 126 12944 47nF 10% 50V  
 2875 4822 124 42058 33 $\mu$ F 20% 50V  
 2880 5322 122 32531 100pF 5% 50V  
 2881 4822 124 41579 10 $\mu$ F 20% 50V

2882 4822 126 12944 47nF 10% 50V  
 2883 4822 126 11671 33pF  
 2884 4822 122 33785 68pF 5% 50V  
 2899 4822 126 13193 4.7nF 10% 63V  
 2918 4822 126 13192 2.2nF 10% 63V  
 2919 4822 126 13192 2.2nF 10% 63V  
 2920 4822 126 13192 2.2nF 10% 63V  
 2921 4822 126 13192 2.2nF 10% 63V  
 2925 4822 124 42058 33 $\mu$ F 20% 50V  
 2926 4822 126 12944 47nF 10% 50V

2927 4822 124 42058 33 $\mu$ F 20% 50V  
 2929 4822 126 12944 47nF 10% 50V  
 2930 4822 126 11219 1 $\mu$ F 20% 16V  
 2936 4822 126 12944 47nF 10% 50V  
 2941 4822 124 42058 33 $\mu$ F 20% 50V  
 2942 4822 124 42058 33 $\mu$ F 20% 50V  
 2943 4822 126 12944 47nF 10% 50V  
 2945 4822 124 42058 33 $\mu$ F 20% 50V  
 2946 4822 126 12944 47nF 10% 50V  
 2952 4822 126 12944 47nF 10% 50V

2953 4822 124 41579 10 $\mu$ F 20% 50V  
 2954 4822 126 12944 47nF 10% 50V  
 2955 5322 126 11583 10nF 10% 63V  
 2956 4822 126 12944 47nF 10% 50V  
 2957 4822 126 12777 470pF 10%  
 2958 4822 124 80653 6.8 $\mu$ F 20% 6.3V  
 2967 4822 126 13192 2.2nF 10% 63V

2968 4822 126 12944 47nF 10% 50V  
 2969 4822 126 12944 47nF 10% 50V  
 2970 5322 122 32531 100pF 5% 50V

2972 4822 126 13192 2.2nF 10% 63V



3850 4822 051 30394 390k 5% 0.062W  
 3851 4822 051 30472 4k7 5% 0.062W  
 3852 4822 051 30333 33k 5% 0.062W  
 3853 4822 051 30223 22k 5% 0.062W  
 3854 4822 051 30223 22k 5% 0.062W  
 3855 4822 117 12519 47 $\Omega$  1% 0.1W  
 3856 4822 117 12521 68 $\Omega$  1% 0.1W  
 3857 4822 051 30473 47k 5% 0.062W  
 3858 4822 117 12519 47 $\Omega$  1% 0.1W  
 3859 4822 117 12521 68 $\Omega$  1% 0.1W

3860 4822 051 30229 22 $\Omega$  5% 0.062W  
 3862 4822 117 12522 24 $\Omega$  1% 0.1W  
 3863 4822 117 12521 68 $\Omega$  1% 0.1W  
 3864 4822 051 10102 1k 2% 0.25W  
 3865 4822 117 12521 68 $\Omega$  1% 0.1W  
 3866 4822 117 11597 510 $\Omega$  1% 0.1W  
 3867 4822 117 12521 68 $\Omega$  1% 0.1W  
 3878 4822 117 11496 62 $\Omega$  1% 0.1W  
 3879 4822 051 30759 75 $\Omega$  5% 0.062W  
 3880 4822 117 11448 180 $\Omega$  1% 0.1W

3885 4822 051 30101 100 $\Omega$  5% 0.062W  
 3886 4822 051 30393 39k 5% 0.062W  
 3887 4822 051 30103 10k 5% 0.062W  
 3888 4822 051 30103 10k 5% 0.062W  
 3889 4822 051 30103 10k 5% 0.062W  
 3890 4822 117 11448 180 $\Omega$  1% 0.1W  
 3891 4822 051 30229 22 $\Omega$  5% 0.062W  
 3895 4822 117 11448 180 $\Omega$  1% 0.1W  
 3896 4822 051 30229 22 $\Omega$  5% 0.062W  
 3897 4822 051 30103 10k 5% 0.062W

3898 4822 051 30103 10k 5% 0.062W  
 3899 4822 051 30103 10k 5% 0.062W  
 3900 4822 101 11672 1k 0.3W  
 3905 4822 051 30221 220 $\Omega$  5% 0.062W  
 3925 4822 052 10102 1k 5% 0.33W  
 3926 4822 051 30473 47k 5% 0.062W  
 3927 4822 051 30474 470k 5% 0.062W  
 3928 4822 117 11496 62 $\Omega$  1% 0.1W  
 3929 4822 051 30105 1M 5% 0.062W  
 3936 4822 051 30471 470 $\Omega$  5% 0.062W

3937 4822 051 30102 1k 5% 0.062W  
 3945 4822 117 11454 820 $\Omega$  1% 0.1W  
 3955 4822 117 11145 4k7 1% 0.1W  
 3956 4822 117 10833 10k 1% 0.1W  
 3960 4822 051 30472 4k7 5% 0.062W  
 3961 4822 051 30473 47k 5% 0.062W  
 3962 4822 051 30473 47k 5% 0.062W  
 3963 4822 051 30472 4k7 5% 0.062W  
 3964 4822 051 30102 1k 5% 0.062W  
 3967 4822 051 30333 33k 5% 0.062W

3968 4822 117 10833 10k 1% 0.1W  
 3969 4822 117 10833 10k 1% 0.1W  
 3971 4822 051 30222 2k2 5% 0.062W  
 3972 4822 051 30102 1k 5% 0.062W  
 3973 4822 051 30103 10k 5% 0.062W  
 3974 4822 051 30681 680 $\Omega$  5% 0.062W



5850 4822 157 11019 1U5 FIXED COIL  
 5851 4822 157 11019 1U5 FIXED COIL  
 5880 4822 157 11019 1U5 FIXED COIL  
 5885 4822 157 70794 47 $\mu$ H  
 5905 4822 146 10648 TRANSFORMER  
 5918 4822 157 70794 47 $\mu$ H  
 5919 4822 157 70794 47 $\mu$ H  
 5920 4822 157 70794 47 $\mu$ H  
 5921 4822 157 70794 47 $\mu$ H

5930 4822 157 71322 470 $\mu$ H  
 5940 4822 146 10649 TRANSFORMER  
 5942 4822 157 70794 47 $\mu$ H  
 5950 4822 157 11086 COIL  
 5955 4822 157 70778 COIL



6841 4822 130 83757 BAS216  
 6850 5322 130 80214 BAS28  
 6852 4822 130 33703 BZX84-C2V4  
 6924 4822 130 31438 1N4001GP  
 6925 4822 130 31438 1N4001GP  
 6935 4822 130 10243 2N5064  
 6936 4822 130 33707 BZX84-B6V2  
 6940 4822 130 83504 D1FS4  
 6941 5322 130 33764 BAV23  
 6945 4822 130 83757 BAS216

6946 5322 130 80255 BZX84-C8V2



7852 5322 130 41982 BC848B  
 7853 5322 130 41983 BC858B  
 7854 5322 130 41983 BC858B  
 7862 4822 130 10706 1MT1  
 7864 5322 130 41982 BC848B  
 7865 5322 130 41982 BC848B  
 7890 5322 130 41982 BC848B  
 7895 5322 130 41982 BC848B  
 7925 5322 130 41982 BC848B  
 7926 5322 130 41982 BC848B  
 7929 5322 130 41982 BC848B  
 7955 4822 209 14933 TL431Z  
 7960 5322 209 70225 LM393D  
 7971 5322 130 41983 BC858B  
 7972 5322 130 41982 BC848B

# Complaint description forms



## FAULT DESCRIPTION FORM

Model number of the defective product :

Date of failure: .. - .. - 19..

Serial number of the defective product : **A/OP**.... 9.....

Country : .....

Fault description :

Please add this description form in the box with the defective panel !!



## FAULT DESCRIPTION FORM

Model number of the defective product :

Date of failure: .. - .. - 19..

Serial number of the defective product : **A/OP**.... 9.....

Country : .....

Fault description :

Please add this description form in the box with the defective panel !!



## FAULT DESCRIPTION FORM

Model number of the defective product :

Date of failure: .. - .. - 19..

Serial number of the defective product : **A/OP**.... 9.....

Country : .....

Fault description :

Please add this description form in the box with the defective panel !!



## FAULT DESCRIPTION FORM

Model number of the defective product :

Date of failure: .. - .. - 19..

Serial number of the defective product : **A/OP**.... 9.....

Country : .....

Fault description :

Please add this description form in the box with the defective panel !!